



[Support Center](#) > [Community](#) > [Debugging](#) > [How to let lauterbach not break when ecu reset](#)

How to let lauterbach not break when ecu reset **Awaiting Agent**

- LY Liangliang Yuan
- **Forum name:** #Debugging

when I debugging, such as I send an UDS request command 11 01 to reset the ecu. then the ecu will do reset, but the lauterbach will break, i need atch again manually, but can not catch the variable at the first time when the software run up, please give some suggestion

Comment (1)



**Nada Ben Dhiab**

6 months ago

Hello Liangliang,

Please generate a system information report about your TRACE32 configuration by selecting the TRACE32 menu 'Help' > 'Support' > 'System Information...', click 'Save to File' and send the resulting text file as an attachment to your ticket when submitting the request on <https://support.lauterbach.com>

Best Regards,

Nada Ben Dhiab