



[Support Center](#) > [Community](#) > [Other Use Cases](#) > [parallel instances of trace 32](#)

## parallel instances of trace 32 **Awaiting Agent**

- sP saravanan P
- **Forum name:** #Other Use Cases

i connected two different processor cards in my pc,  
it is like i'm communicating between the cards. i want to open two parallel instances of trace 32.  
is there a way we can open two instances by editing the config.t32 file?

### Comment (1)

**Firas Zouaghi**

1 year ago

Hello,

To manually enable intercom, you can edit all config files by adding the following settings:

\*Configuration for the master GUI\*

;T32 Intercom

IC=NETASSIST

PORT=10000

PACKLEN=1024

NAME=Master

PBI=

USB

CORE=1

\*Configuration for the second GUI\*

;T32 Intercom

IC=NETASSIST

PORT=10001

PACKLEN=1024

NAME=SLAVE

PBI=

USB

CORE=2

An easier way is to use the command `TargetSystem.NewInstance` to start a second instance from the first instance, or use `T32Start` to enable intercom configuration for all instances.

For more detailed information, please refer to the "Multicore Debugging and Tracing" section in our documentation: [https://www2.lauterbach.com/pdf/app\\_t32start.pdf](https://www2.lauterbach.com/pdf/app_t32start.pdf)

And please refer to the description of the command TargetSystem.NewInstance in the document : [https://www2.lauterbach.com/pdf/general\\_ref\\_t.pdf](https://www2.lauterbach.com/pdf/general_ref_t.pdf)

Best regards.