



[Support Center](#) > [Community](#) > [Other Use Cases](#) > [parallel instances of trace 32](#)

parallel instances of trace 32 **Awaiting Agent**

- sP saravanan P
- **Forum name:** #Other Use Cases

i connected two different processor cards in my pc,
it is like i'm communicating between the cards. i want to open two parallel instances of trace 32.

is there a way we can open two instances by editing the config.t32 file?

Comment (1)

Firas Zouaghi

7 months ago

Hello,

To manually enable intercom, you can edit all config files by adding the following settings:

Configuration for the master GUI

```
;T32 Intercom  
IC=NETASSIST  
PORT=10000  
PACKLEN=1024  
NAME=Master  
PBI=  
USB  
CORE=1
```

Configuration for the second GUI

```
;T32 Intercom  
IC=NETASSIST  
PORT=10001  
PACKLEN=1024  
NAME=SLAVE  
PBI=  
USB  
CORE=2
```

An easier way is to use the command ``TargetSystem.NewInstance`` to start a second instance from the first instance, or use ``T32Start`` to enable intercom configuration for all instances.

For more detailed information, please refer to the "Multicore Debugging and Tracing" section in our documentation: https://www2.lauterbach.com/pdf/app_t32start.pdf

And please refer to the description of the command `TargetSystem.NewInstance` in the document : https://www2.lauterbach.com/pdf/general_ref_t.pdf

Best regards.