



[Support Center](#) > [Community](#) > [Other Use Cases](#) > [parallel instances of trace 32](#)

parallel instances of trace 32 **Awaiting Agent**

- sP saravanan P
- **Forum name:** #Other Use Cases

i connected two different processor cards in my pc,
it is like i'm communicating between the cards. i want to open two parallel instances of trace 32.

is there a way we can open two instances by editing the config.t32 file?

Comment (1)

Firas Zouaghi

10 months ago

Hello,

To manually enable intercom, you can edit all config files by adding the following settings:

Configuration for the master GUI

```
;T32 Intercom  
IC=NETASSIST  
PORT=10000  
PACKLEN=1024  
NAME=Master  
PBI=  
USB  
CORE=1
```

Configuration for the second GUI

```
;T32 Intercom  
IC=NETASSIST  
PORT=10001  
PACKLEN=1024  
NAME=SLAVE  
PBI=  
USB  
CORE=2
```

An easier way is to use the command ``TargetSystem.NewInstance`` to start a second instance from the first instance, or use ``T32Start`` to enable intercom configuration for all instances.

For more detailed information, please refer to the "Multicore Debugging and Tracing" section in our documentation: https://www2.lauterbach.com/pdf/app_t32start.pdf

And please refer to the description of the command `TargetSystem.NewInstance` in the document : https://www2.lauterbach.com/pdf/general_ref_t.pdf

Best regards.