



Knowledgebase > FAQs by core architecture > Arm > [Arm] SYStem.DETECT sets the CPU to "NONE"

---

## [Arm] SYStem.DETECT sets the CPU to "NONE"

2023-05-19 - Comments (0) - Arm

The **SYStem.DETECT** command is not intended to detect the used CPU on Arm, but to detect the DAP in the JTAG chain. Please check if your chip is listed under **SYStem.CPU** . If not, please contact the Lauterbach support (<https://support.lauterbach.com/new-ticket>) and specify your TRACE32 software version. You may also check if the chip is officially supported by Lauterbach using the search field on the Lauterbach website.

Tags

Arm Cortex