



Knowledgebase > TRACE32 PowerView > Can I open automatically a specific section in the peripheral file with TRACE32 command?

---

## Can I open automatically a specific section in the peripheral file with TRACE32 command?

2023-10-24 - Comments (0) - TRACE32 PowerView

Yes, You need to specify the path to open this section with the command PER (sections and subsections are delimited by ",")

### **Example:**

PER.view , "Nested Vectored Interrupt Controller,Interrupt Enable Registers"

You can open the selected section without additional (closed) sections by adding a leading colon (":") e.g.

PER.view , " :Nested Vectored Interrupt Controller,Interrupt Enable Registers"

Tags

PER