



Knowledgebase > TRACE32 PowerView > Can I open automatically a specific section in the peripheral file with TRACE32 command?

Can I open automatically a specific section in the peripheral file with TRACE32 command?

2023-10-24 - Comments (0) - TRACE32 PowerView

Yes, You need to specify the path to open this section with the command PER (sections and subsections are delimited by ",")

Example:

```
PER.view , "Nested Vectored Interrupt Controller,Interrupt Enable Registers"
```

You can open the selected section without additional (closed) sections by adding a leading colon (":") e.g.

```
PER.view , ":Nested Vectored Interrupt Controller,Interrupt Enable Registers"
```

Tags

PER