



[Knowledgebase](#) > [PRACTICE](#) > [Can messages in TRACE32 PowerView be redirected to the console?](#)

## Can messages in TRACE32 PowerView be redirected to the console?

2026-04-03 - [Comments \(0\)](#) - [PRACTICE](#)

Yes, you can redirect messages to the console using the `AREA .STDOUT` command.

For example, to redirect messages from the default **AREA A000** to **STDOUT**, use:

```
AREA .STDOUT A000
```

This will ensure that all messages printed to the standard **AREA** window, including system and error messages, are also displayed in the console from which TRACE32 PowerView was started.

For more details, refer to [PowerView Command Reference](#)