



[Knowledgebase](#) > [PRACTICE](#) > [Can messages in TRACE32 PowerView be redirected to the console?](#)

## Can messages in TRACE32 PowerView be redirected to the console?

2026-03-10 - [Comments \(0\)](#) - [PRACTICE](#)

Yes, you can redirect messages to the console using the `AREA .STDOUT` command.

For example, to redirect messages from the default **AREA A000** to **STDOUT**, use:

```
AREA .STDOUT A000
```

This will ensure that all messages printed to the standard AREA window, including system and error messages, are also displayed in the console from which TRACE32 PowerView was started.

For more details, refer to [PowerView Command Reference](#)