 


 $\label{local_equation} \mbox{Knowledgebase} > \mbox{TRACE32 PowerView} > \mbox{I am getting NAN as a variable value in Var.View. What does that } \mbox{mean?}$

I am getting NAN as a variable value in Var.View. What does that mean?

2025-10-09 - Comments (0) - TRACE32 PowerView

You are viewing a floating point variable which gets according to IEEE 754 the value infinite, this is why you are seeing NAN.



- Tags
- sYmbol