


Knowledgebase > TRACE32 PowerView > I am getting NAN as a variable value in Var.View.  
What does that mean?

---

## I am getting NAN as a variable value in Var.View. What does that mean?

2023-10-24 - Comments (0) - TRACE32 PowerView

You are viewing a floating point variable which gets according to IEEE 754 the value infinite, this is why you are seeing NAN.

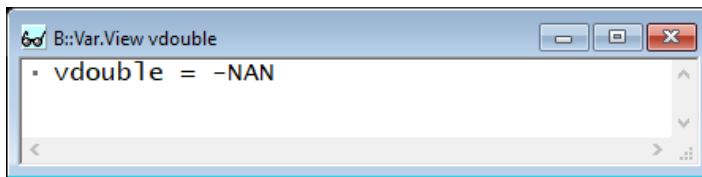

Tags

sYmbol