



Knowledgebase > FAQs by core architecture > MPC5xxx / SPC5xx > [MPC5xxx] Why do I get power fail messages, despite target power is correct at the reference pin?

[MPC5xxx] Why do I get power fail messages, despite target power is correct at the reference pin?

2022-01-11 - Comments (0) - MPC5xxx / SPC5xx

If one cannot execute **SYStem.Up** for the debugger and power fail is detected instead, it should be checked if two debugger (e.g. JTAG dongle and NEXUS probe) are connected at the same time.

This is a not allowed configuration, which causes that neither the JTAG dongle nor the NEXUS probe can be used for debugging.