



[Knowledgebase](#) > [Setup / update](#) > [Reprise License Server at Customer Site - How to Get Your RLM Host ID?](#)

# Reprise License Server at Customer Site - How to Get Your RLM Host ID?

2026-01-26 - [Comments \(0\)](#) - [Setup / update](#)

## 1. Download the RLM Server Software and the Lauterbach ISV server settings file

- [Reprise Software Inc. - RLM License Administration Bundle Downloads](#)
- [Download Lauterbach ISV server settings file](#) (SHA1=e20a33b749d22d49e3441358bc208906f17d95eb)


## 2. Install the RLM Server Software on your RLM License Server Machine

### 3.1. Query the RLM host ID via a Web Browser

Note

A running RLM license server is required.

- Go to `http://<your.license.server>:5054/`
- Click on "System Info". **Ethernet: xxxxxxxxxxxx** displays the 12- or 8-digit RLM host ID.

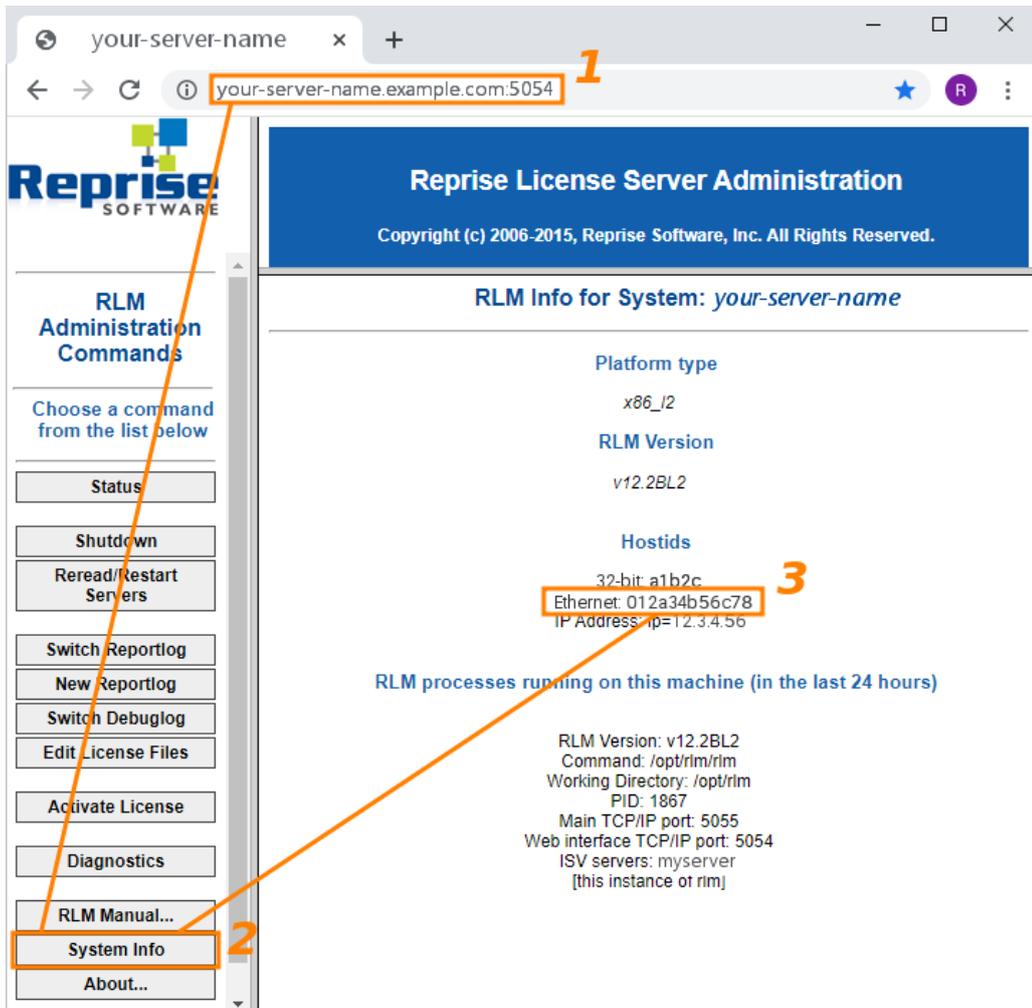

### 3.1.1. Query the RLM host ID via the rlmutil.exe Utility on Windows

Notes

- A running RLM license server is required.
- If more than one Ethernet ID is listed, please provide all of them. Lauterbach typically uses the first RLM host ID shown.

Open a command shell on your **RLM License Server machine**, and invoke the command

```
[/rlm_installation_path/]rlmutil.exe rlmhostid -ether
```

The result will appear as shown below:

```
Microsoft Windows
(c) 2019 Microsoft Corporation. Alle Rechte vorbehalten.
C:\Users\rob>cd C:\rlm.v14.0000-a00_s3.admin 1
C:\rlm.v14.0000-a00_s3.admin>rlmutil.exe rlmhostid -ether 2
rlmutil v14.0
Copyright (C) 2006-2019, Reprise Software, Inc. All rights reserved.
Hostid of this machine: a01c02d07e08 3
C:\rlm.v14.0000-a00_s3.admin>_
```

### 3.1.2. Query the RLM host ID via the rlmutil Utility on Linux

Note

If more than one Ethernet ID is listed, please provide all of them. Lauterbach typically uses the first RLM host ID shown.

Open a command shell on your **RLM License Server machine**, and invoke the command

```
[/rlm_installation_path/]rlmutil rlmhostid -ether
```

The result will appear as shown below:

```
$ cd rlm machine.admin 1
$ ./rlmutil rlmhostid -ether
rlmutil v14.0
Copyright (C) 2006-2019, Reprise Software, Inc. All rights reserved.
Hostid of this machine: a01c02d07e08 2
```

Further Information

Documentation: [How to Use TRACE32 Floating Licenses](#)