



[Knowledgebase](#) > [Setup / update](#) > [USB driver for Windows Arm](#)

## USB driver for Windows Arm

2026-04-30 - [Comments \(0\)](#) - [Setup / update](#)

To install the WinUSB driver, go to `bin/windowsarm64/drivers` and run `setup_t32_winusb_driver.exe`. After installation, the device will appear under **Universal Serial Bus devices**. This is because on Windows Arm, Lauterbach uses Microsoft's standard WinUSB driver, which is generic and therefore listed in that category.

On Windows x86 and x64, however, Lauterbach provides its own driver implementation, allowing control over both the displayed name and the category. As a result, the device appears as **Lauterbach POBBUS USB Controller** under **TRACE32 Devices**.