


## [Arm] Does TRACE32 need access to the CoreSight ROM table?

2023-05-19 - Comments (0) - Arm

The ROM table can be scanned in TRACE32 using the command

### **SYStem.DETECT DAP**

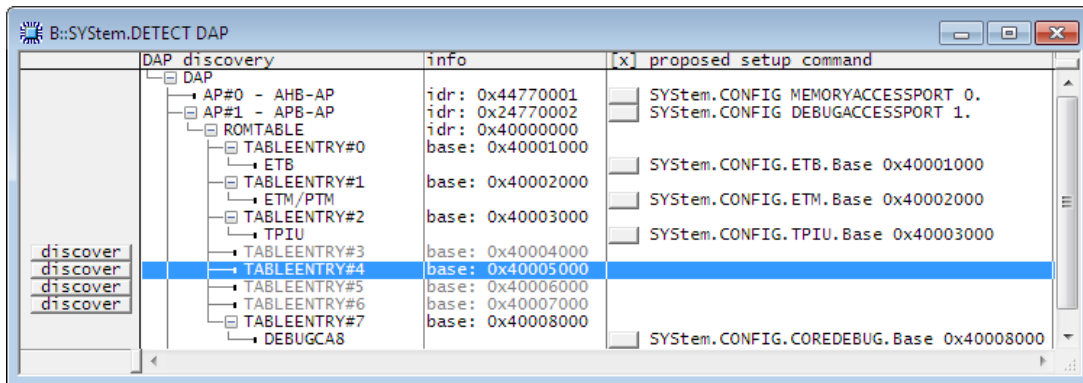

However, TRACE32 does not rely on the ROM table. If the chip is supported by TRACE32, then it is enough to select the right CPU using the command

### **SYStem.CPU < cpu >**

Otherwise, the CoreSight settings have to be set up with a script using the

**SYStem.CONFIG** commands. Refer in this case to the document [Setup of the Debugger for a CoreSight System](#)

Tags

Arm Cortex

CoreSight